STATEMENT OF NON-LIABILITY: Air guns can cause serious harm, and in some instances, even death and should be handled with great care! This air gun is surrendered by **Barra** understanding that we assume no liability for its resale, handling use or possession under local laws or regulations. Neither the manufacturer nor **Barra** assumes any responsibility whatsoever. Personal injury or property damage resulting from either international or accidental discharge or for air gun functions subjected to influences beyond our control, are the sole responsibility of the air gun owner. We will honor no claims that may result from careless handling, unauthorized adjustments, defective or improper ammunition, corrosion or neglect. By accepting this air gun, the buyer agrees to release the seller and Moab Ventures and all associated persons from liability for any damage to persons or property that may result, for any reason, by using this air gun. Safety is your responsibility.

WARRANTY: This Barra Air Gun is warranted against manufacturer defects and workmanship with proof of purchase for one year after the original purchase date. This warranty does not cover damages due to modifications, abuse or failure to perform regular maintenance. For warranty questions, or to speak with one of our customer service representatives, please contact:

Email: help@barraairguns.com Phone: 1-510-296-3250 NOTE: The customer is responsible for freight charges to Barra . Barra will be resonsible for freight charges

back to the customer.

Please check any gun that has been dropped to ensure that its function has not ▲ WARNING: |

Moab Ventures, LLC 11427 N Highway 59 Gravette, AR 72736 All rights reserved. MADE IN CHINA.

Distributed by:

ITEM NO. 1799

Distributed by: MOAB



Moab Ventures, LLC 11427 N Highway 59 Gravette, AR 72736 All rights reserved. MADE IN CHINA.

COWBOY SERIES

READ ALL INSTRUCTIONS AND WARNINGS IN THIS MANUAL BEFORE USING THIS AIR GUN. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIR GUN.

IMPORTANT: THIS PRODUCT IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER, ADULT SUPERVISION REQUIRED.

DO NOT USE your air gun until you have carefully read these cautions, the owner's manual and all other printed material with this air gun. THIS IS A HIGH POWERED AIR GUN AND CAN CAUSE INJURY OR DEATH. Misuse may void your warranty and may expose you and others to possible harm! A few minutes now will increase the longevity of your air gun. Remember to treat this air gun with the same respect you would a firearm. Alweays carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

PRODUCT TO STORE

PLEASE DO NOT RETURN

For product assistance or questions, please contact Customer Service: Email: help@barraairguns.com Phone: 1-510-296-3250 You can get answers to frequently asked questions at www.barraairguns.com

WARNING:

DO NOT BRANDISH OR DISPLAY AIR GUNS IN PUBLIC. IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

> ACTUAL COLORS AND DECORATIONS OF THE PRODUCT MAY VARY.

▲ WARNINGS: (Restricted to users 16 years of age or older.)

Always keep the air gun pointed in a SAFE DIRECTION! Treat all air guns as if loaded! DO NOT RELY ON THE SAFETY MECHANISM. **▲** WARNING: WARNING: This sport gun was developed for enjoying sport shooting only. As the Air Gun has the potential risk of serious bodily injury or death or causing damage to property, please read all instructions and warnings in this manual before using this air gun.

A WARNING: This is a high power air gun recommended for use by those 16 years of age or older. Read all instructions before using. The purchaser and user should conform to all laws governing use and ownership of air guns.



Disassembling or modifying the gun


Never put your finger on the trigger

unless you are ready to fire.

void the manufacturer's warranty.

A WARNING:



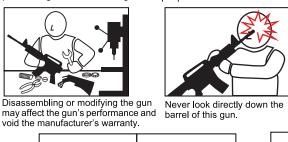





THIS PRODUCT IS NOT A TOY. ADULT SUPERVISION REQUIRED. THIS

PRODUCT IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER.

Always keep the airgun out

When not in use, set the

SAFETY to "ON.

GUNS MUST BE WORN AT ALL TIMES BY THE USER AND ANY PERSON WITHIN RANGE. READ ALL INSTRUCTIONS AND OWNER'S MANUAL BEFORE USING. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIR GUN. THIS HIGH POWERED AIR GUN IS RECOMMENDED FOR USE WITH ADULT SUPERVISION. MAY BE DANGEROUS UP TO 300 YARDS (257 METERS). **A WARNING:** DO NOT BRANDISH OR DISPLAY AIR GUNS IN PUBLIC. IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A

MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH, EYE PROTECTION DESIGNED FOR AIR

FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME. PLEASE REMOVE ALL PACKAGING MATERIAL BEFORE USE. IF PRODUCT BECOMES DAMAGED OR BROKEN IN ANY WAY DISCONTINUE USE. USING DAMAGED PRODUCT MAY CAUSE DAMAGE OR LEAD TO INJURY.

2. Not Using Special Shooting Techniques. Proper shot follow through will aid in better

Poor Accuracy. Possible Causes:


- 1. Dirty Bore. Most accuracy complaints are traced to an unclean bore. Even a barrel which appears to be clean may be shooting well below its potential. Solution: clean bore with cleaning rod or cleaning pellets.
- accuracy. The length of the barrel on the gun makes the gun more sensitive to movement. **Solution:** Due to the time it takes for the ammo to leave the barrel, you should practice holding your shot position until shot impact is either seen or heard. 3. Improper Lubrication. In some cases lubrication can affect accuracy.
- Solution: We recommend following the lubricaiton instructions noted in this manual. 4. Incorrect or Defective Ammo. Keep in mind that each air rifle is unique and it requires some experimentation to find the type of pellets and BBs that will work best. Damaged pellets will not shoot well and may damage the airgun.
 - Solution: Use only new flawless high quality ammo.

13 Reviewing Gun Safety

- Treat all air guns as if they were loaded and with the same respect you would an actual firearm. Follow safe air gun handling practices. Remember that air guns can be dangerous if mishandled. Airguns are not toys; they can cause serious injury or even death. For proper training and information contact your local air gun clubs and/or the National Rifle Association.
- use may cause serious injury or death. - Normal operation temperature or airguns is approximately 20° to 110°F (-6° to 42°C). - Always check to see if the air gun is loaded when removed from storage or received from another person! A projectile may be in the barrel without being easily visible! Never fire, even

- User should obey all laws regarding the usage and ownership of air guns. Misuse or careless

- unloaded, air guns against any part of your body. - Never allow anyone, especially youth, to use an airgun loaded or unloaded until they are fully trained in airgun safety and proper use!
- Adjustments and repairs should be made only by specialized technicians. Never use a malfunctioning air gun. - Store the airgun in a safe and proper place, secure from unauthorized use! Locking it up
- is best. Always keep securely away from children. - Shoot safely. Do not pump more than 10 times. Air gun projectiles may travel up to 300 yards (275 meters). Be sure of your backstop. Avoid ricochets. Do not shoot at hard surfaces. Shooters and
- bystanders should always wear shooting glasses during firing sessions. NEVER depend on any "safety." Select a safe place for operating the air gun. Avoid shooting in public places. - Always put the gun in a case or bag when you are carrying it to avoid giving rise to public panic.

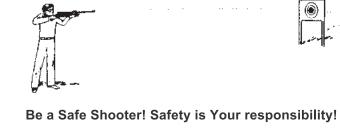

▲ FIRING SAFETY: • Repairs should only be made by specialized technicians. Please contact our customer service

- for more information by calling 1-510-296-3250or email them at help@barraairguns.com · Never look down the end of the muzzle down the barrel! • Secure your unloaded/unpumped air gun from unauthorized use by locking it up safely and
- separately from ammo when not in use. · Never depend on any safety mechanisms. All safeties are mechanical devices and therefore
- subject to failure. Be sure your airgun is unloaded when crossing a fence, stream, or other barrier; letting go of it for any reason; putting it away; allowing another person to handle it; or entering a
- house or vehicle. · Always point the gun in a safe direction. NEVER POINT your air gun at people or animals even if it is not loaded.
- Air guns are not toys. They should only be operated by persons 16 years or older and with adult supervision by an adult of 18 years of age or older. · Safety is a straight forward but continuous process.
- · Never use drugs or alcohol while handling this air gun. Always check to see if the air gun is on "SAFE" and unloaded when getting it from another
- person or from storage. · BBs should never be shot in a pellet trap. • Use targets that will not be penetrated or that cannot cause a ricochet. Do not shoot at or
- Keep muzzle of gun clean. Avoid contact with the ground or anything that could obstruct the barrel.

Note: Multi-Pump air guns have unique characteristics. Most problems encountered by new owners are often easily corrected. Regular maintenance is a must for long time use.

injury or damage your gun and void the warranty.

open the bolt.

Troubleshooting Guide

- Air Gun Doesn't Take in Air while Pumping: 1. Shooter Error. The Air Gun has a built in safety that won't allow pumping until the bolt has
- **Solution:** Bring the bolt all the way back and begin pumping. 2. Shooter Error. Shooter may not be bringing bolt all the way back. Solution: Bring bolt all the way back until it stops and gradually increase pressure until a
- final click is felt. DO NOT force. Air Gun Does Not Shoot Possible Causes:
- 1. Safety in the "ON" position. Always check safety before forcing trigger. Solution: Put the safety in the "FIRE" position manually. Always point the air gun in a SAFE
- DIRECTION before releasing safety. 2. Air Gun is not properly pumped or loaded: Projectile will not fire if not pumped or bolt is open. **Solution:** Refer to section 3 for step by step pumping. See section 4 for loading. 3. Projectile is Jammed: This is a very dangerous situation. Place the gun safety to ON and
- Solution: Refer to section 7 for step by step of un-jamming a projectile. 4. Air Gun's Seal may be broken: Air gun may have been dropped or defective. Solution: Please contact our customer service line for more details by calling 1-510-296-3250 or email them at help@barraairguns.com .
- **A WARNING:** Only have specialized air gun technicians repair air gun. Tampering with and adjusting the internal workings of the gun may void the manufacture's warranty and can cause personal injury when improperly handled. Call our customer service line for more détails on repair at 1-510-296-3250 or help@barraairguns.com

A WARNING: The more times you pump the gun increases the risk of serious injury. Use

NEVER PUMP YOUR GUN MORE THAN 10 TIMES as additional pumps may result in serious

great caution and only use the amount of pumps necessary for the shot.

pumping! This procedure can result in a LOADED GUN and a projectile

Getting To Know Your Gun Contents: Barra 1866 air rifle. User Manual & Warning Card .177 BB Door Safety mechanism Iron sights Rifled steel barrel Multipump leve Pellet door

Pumping Your Air Rifle AWARNING: KEEP YOUR HANDS and all other objects AWAY FROM THE TRIGGER AND SAFETY during ALL pumping, and loading procedures! WATCH FOR "PINCH POINTS."

.177 Cal 4.5mm

Single shot

.177 Cal 4.5mm

Max Velocity

620-800 FPS (with premium .177 cal pellet)

Pumping Your Air Gun

Lenath

• Your air gun is powered by a compressed air system that must be pumped before use. • Start by making sure the safety is in the ON postion. Do this by placing the hammer forward. The 1866 safety looks a hammer. The red dot is hidden. See Image 1. • With the Safety ON, open the bolt handle (located on the right side of the gun), by pulling it

4.4 lbs

Specification Weight

1866

Air Rifle

straight back. See image 2. The rifle cannot fire with bolt open. · Avoiding the trigger area and any pinch points. See image 3. • NOTE: The Air Gun has a built in safety that won't allow pumping until the bolt has been

pulled back. · With the bolt open, the SAFETY ON, and the muzzle pointed in a SAFE DIRECTION, pull the pump handle down by applying firm but steady pressure. Then, swing the handle all the way forward until you hear it take in air, See image 3,

• Then, bring the pump handle all the way back to the starting position. This is one pump. Repeat process for the desired amount of pumps from 1 to 10 times. NEVER pump more than 10 times. • The more times you pump, the greater the speed of the ammunition.



Recommended 35 ft distance (10.6M) Indoor/Close Range Longer Range Number 2 pumps 4-6 pumps 7-10 pumps Of Pumps

A WARNING: Do not open the bolt, close the bolt, and then pull the trigger before

being expelled from the gun during pumping. Re-cock the gun by opening the bolt and put the trigger safety to the ON position and follow the pumping procedures above. Loading Your Air Rifle

Loading The Air Gun with BBs • Push forward and open the loading door on the left side of the rifle. See image 4. • Fill the internal magazine with roughly 50 .177 cal/4.5mm BBs. Do not overfill as this may


cause the feeding system to not operate properly. · Close loading door. • Next, with the Bolt back, the SAFETY ON, and the top of the gun facing upright, tilt the muzzle

of the gun upwards from 45° to 90°. See image 5. · With gun tilted upward, look inside the loading port, and you should be able to see a BB lightly resting on the magnetic tip. See image 6. • If there is not a BB on the loading tip, gently shake the gun until one feeds onto the tip.


• After confirming the projectile is in place, push the bolt handle forward all the way and lock it,


closing the loading port from view. The BB is now chambered and in the firing position.

⚠ WARNING: The airgun is now loaded and read to fire. Be sure the airgun is always pointing in a SAFE DIRECTION — away from any person or anything you do not intend to shoot

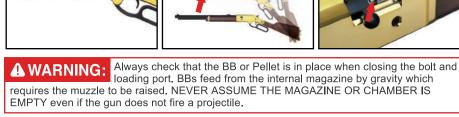

These can be unsafe and damage your air gun.

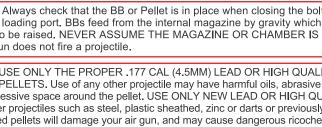

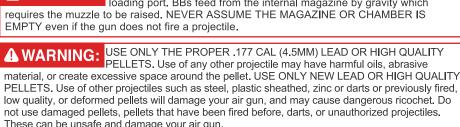

Advanced Maintenance & Disassembling

or contact our customer service by calling 1-510-296-3250 or email them at help@barraairguns.com gun may make it unsafe to use.

Advanced Maintenance

the parts of the gun that are difficult to reach.

· Modification of the gun mechanism may cause a gun to malfunction and tampering with a • Unauthorized tampering of this air gun will void the manufacturer's warrantv. · Moab Ventures will not be held responsible for any damages or accidents caused by incorrect

• For the most up to date authorized maintenance instructions please go to www.barraairguns.com

· To ensure the life of the air gun, routine inspections and maintenance should be performed. · Advanced maintenance and disassembling of this air gun includes lubricating and cleaning

operation, disassembly, or modification of the air gun. **WARNING:** Any advanced cleaning of the air gun should be done by someone with advanced air gun knowledge and training. For tutorials and step by step instructions please visit our website at **www.barraairguns.com** or contact our customer service by calling 1-510-296-3250 or email them at **help@barraairguns.com**.

Reviewing Safety A FIRING SAFETY: • Shoot your air gun shortly after pumping and loading. It is not advisable to leave the air gun

pumped for extended periods of time. Do not attempt to unpump your airgun! If you have pumped your air rifle, loaded a pellet and

has not been affected.

decided not to take the shot in a reasonable amount of time, do not leave your air gun pumped. · Avoid excessive force in opening and shutting the bolt. • Protective eyewear is a must for all air gun shooters and spectators.

• Confirm your firing area is safe before firing. Think first, fire second. • Always be sure of your backstop. Be sure that the entire path of your projectile, even beyond the target is safe! Do not shoot at glass, fire, water or hard surfaces. Avoid ricochets. It is impossible to predict where a glancing shot will fall. Remember a pellet may travel up to 300 yards (257 meters).

Backstops should be inspected for wear before and after each use. Discontinue use if the backstop surface shows signs of failure or if projectiles rebound or ricochet severely. Since

backstop surfaces eventually fail, always place the backstop in a location that will be safe Modifications and/or tampering with a trigger mechanism may cause an air gun to malfunction and become unsafe to use. Any change in performance such as lowered trigger force and shortened trigger travel indicates possible wear and such air guns should be inspected, replaced or properly repaired. Reduced trigger force could make the air rifle fire even more

easily when dropped. Check any air gun that has been dropped to make sure its function

shooting. Be sure of your backdrop and what is past it in case the backdrop fails. Only use targets designed for the right ammunition and power of airgun you are using. To adjust the elevation (height), push up on the rear sight

Sights

Sight Aiming and Adjustments

be perfectly aligned. See image 11.


toward the muzzle and slide ramp in the direction you want

the sight to go. Sliding it forward will increase the height, pulling backward will decrease height. The steps on the ramp will allow you to lock in the sight. See image 12.

• For the best accuracy, align the rear sight with the front sight

Because of this air gun's power, use extreme caution when

and shoot directly at a safe target. The three sights should

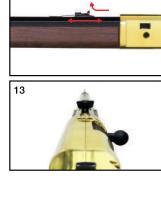

1. Put "ON" SAFETY

7. Take "OFF" SAFETY

2. Open Bolt

5. Close Bolt

3. Pump

4. Load

6. Aim

8. Fire

⚠ WARNING: If a projectile does not fire from the loaded rifle, the RIFLE IS JAMMED. This is a very dangerous situation. Handle the air rifle carefully and refer

The airgun is now loaded and read to fire. Be sure the airgun is always ⚠ WARNING: pointing in a SAFE DIRECTION away from any person or anything you do not intend to shoot

Loading The Air Gun with Pellets

emptied of extra BBs. (See section 6).

facing forward. See image 7.

SAFE POSITION

A WARNING:

Selecting Firing Mode

· Make sure the bolt is open, and the internal magazine is

Lower the muzzle slightly and load a .177 cal/4.5mm lead or

• Push the bolt forward the rest of the way, and lock it. The

pellet is now chambered and in the firing position.


high quality alloy pellet into the loading port with the solid end


Keep the SAFETY on "SAFE" until you are actually ready to shoot. **⚠** WARNING: Then turn the SAFETY to "FIRE" and fire in a SAFE DIRECTION. Safety and Firing

FIRE POSITION

· Locate the safety inside of the trigger guard, and in front of the trigger.

1-510-296-3250

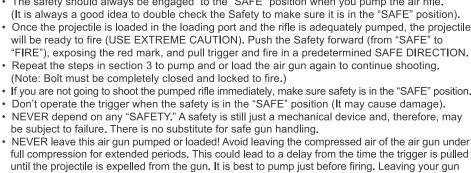

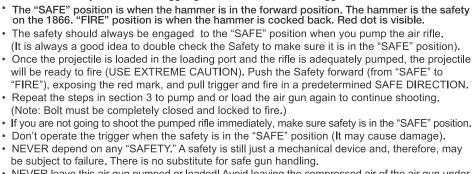

help@moab-us.com

Cleaning, Lubrication and Storage

• Make sure the bolt is open and the safety is "ON" and pointed in a SAFE DIRECTION.

The exterior surface should be regularly wiped down with a soft, clean, lightly oiled cloth,

· Cut a strip of cotton cloth the width of the eyelet hole and rotate the cloth around a cleaning rod. · Insert the cleaning rod into the barrel of the gun while slowly twisting down the muzzle.

pumped for more than an hour may cause permanent damage to the air release valve. After shooting session is completed, return safety to the right "SAFE" position. · When gun is not in use, store unloaded gun in a SAFE PLACE away from children.

SAFE DIRECTION AT ALL TIMES!

DO NOT DEPEND ON ANY SAFETY MECHANISM! KEEP POINTED IN

Unloading Air Rifle and Magazine for BBs Make sure the safety is ON and pull the bolt back all the way. Open the bb door and hold a cupped hand to the hold as you tilt that side of the gun down. Shake the gun until all the bbs are removed. Then remove the BBs from the loading port by moving the bolt slightly forward until no BBs remain. Finally, close bolt, make sure the safety is ON, and store the gun in a safe place away from children.

Quick Step Shooting Guide

the side of your octagonal barrel.

to section 7 on removing Jams.

After you have read the manual in detail and

understand each step, please refer to the quick

step guide on the right. A list can also be found on

Unloading Your Air Rifle

- **Unloading Air Rifle and Magazine for Pellets** • If already loaded: Removing the pellet is inadvisable and doing this with a sharp object could seriously damage the delicate rifling. The best course of action is to shoot the airgun into soft
- open the bolt make sure the safety is ON, and run a cleaning rod down the muzzle end of the barrel pushing the pellet through the barrel, Be careful not to let the pellet fall back into the back BB feed hole of the gun. If this happens, have a qualified gunsmith remove the left receiver and clear the loading port or call our customer service line at1-510-296-3250 or email them at help@moab-us.com.
- Always check an airgun to see if it is loaded when removed from storage or received from another person. The only way to be sure that your air gun is not loaded is to pass an object (a cleaning rod) all the way through the bore. A projectile or obstruction could be present anywhere in the bore.

ground, a pellet trap or thick pile of newspapers or magazines. If a safe target is not available,

- **Clearing Jams Un-jamming Your Air Rifle**
- closed, do not try to close it until you have opened it all the way. The air rifle will not fire while the bolt is all the way open. Next, gently and slowly take a cleaning rod through the muzzle end of the barrel. Be careful not to damage the bolt by pushing the cleaning rod too far or too hard.

• After finding the jammed projectile in the barrel, apply firm but steady pressure to the breach.

 The projectile should break loose and fall out of the loading port. Do not reuse this projectile. · Confirm that the barrel is now free from obstruction. by sliding the cleaning rod through the

To resume operation, follow the pumping, loading and firing sections above. If the gun still does not fire after proper procedure, please call our customer service line at 1-510-296-3250 or email

· If a projectile does not fire from the loaded rifle after going through the correct loading and pumping procedure, then the rifle is jammed. Immediately open the bolt and turn the trigger safety to "ON." If the bolt was not all the way

A WARNING: Even if the gun no longer fires BBs that does not mean that the gun is empty. Always treat the air gun as if it were loaded, and with the same respect you would a firearm.

muzzle end of the barrel.

them at help@barraairguns.com.

Use the Right Lubrication

Cleaning Barrel/Bore

Cleaning the Exterior

making sure to get every screw and rail to prevent rust.

· Maintenance is needed when projectile speed becomes slower.

Piston Seal

Make Sure that the internal magazine is empty and that the loading port is not loaded. Dry Fire in a SAFE DIRECTION to confirm that the barrel and pump system are now empty.
Open the bolt all the way, place the trigger safety to the "ON" position and then close the bolt.
Make sure the gun is well oiled, clean and dry before storage.

kind of oils or solvents including household oils and aerosol type lubricants may cause damage To maintain top shooting performance, lightly oil the three pumping lever hinges, the foam wiper on the piston and piston seal every 500 shots. See image 10.

Make sure to store gun in a safe, cool place away from children and untrained shooters. Store the ammunition in a secure separate location. WARNING: Even if the gun no longer fires BBs does not mean that the gun is empty.

Pumping Lever

⚠ WARNING: Improper oils and solvents (such as aerosols and spray type lubricants), can ignite a dieseling affect which can be harmful for the shooter, and gun and may void the warranty. Use only automotive motor oils.

vou would a firearm.

Storing Your Air Rifle

Always treat the air gun as if it were loaded, and with the same respect

· Improper lubrication or not lubricating your air rifle will lead to breakdown, wear, inaccuracy and power loss. Using improper oils and solvents can damage the air rifle and harm user and others. A clean lubricated air rifle will shoot accurately and dependably.

Lubrication should be done on a regular basis by an adult, or with adult supervision.

Use only 10W, 20W, 30W, weight non detergent, automotive motor oil. The use of any other

AVOID PINCH POINTS