

Tanfoglio Witness 1911 Pistol Owner's Manual

Tanfoglio Witness 1911 Pistol ItemCode # 358003

Caliber: 0.177" (4.5mm)

Velocity: 320 fps

Loudness: 3-Medium

Overall Length: 8.6

Capacity: 18

Barrel: Smooth bore

Action: Semiautomatic

Safety: Manual

Power Plant: CO2

Single Shot Or Repeater: Repeater

Trigger Action: Double-action and single-action

Blowback: Yes

Material: Full metal

Body Type: Pistol

Weight: 1.98 lbs



Tanfoglio Witness 1911 Pistol Instructions Manual

Tanfoglio Witness 1911 Pistol Instructions Manual



To remove the magazine, press the Pull down the spring with the release (1). Fill the magazine with the appropriate release button (1) located on the left side of the grip. Slide the magazine out as on the picture. 4.5 mm as shown(2). Maximum capacity is 18 BBs. Take care to place the BBS as on the picture.



Insert the CO2 cartridge in the magazine as shown on the picture. **Caution:** Take care to ALWAYS FULLY EMPTY the CO2 CARTRIDGE when you remove it from the magazine.



Tighten the screw located on the magazine. When pressure starts increasing in the magazine (expansion of the CO2 in the magazine can be heard), finishing screwing rapidly. Very important: do not tighten excessively, it could permanently damage the O'rings.



Loosen the screw located on the bottom of the magazine with the tool provided in the kit.



Slide the magazine in the grip until it is locked (a distinct click will be heard).



In order to fire, you have to cock the gun: pull the slide backward as shown and release.



To begin shooting, aim at a target and pull the trigger.



When the magazine is empty, the slide stay locked back. To release this one, press down the slide lock lever as shown in the picture. **CAUTION:** Never aim at a person. Never fire at a hard surface at close range as pellets will rebound.



After emptying the magazine, push the safety mechanism back into the locked position.

Danger

NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 110 YARDS (100 METRES)

Warning

THIS IS A HIGH POWERED AIR-GUN RECOMMENDED FOR USE BY THOSE 18 YEARS OF AGE OR OLDER. READ ALL INSTRUCTIONS MANUAL BEFORE USING. THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS OF THE COUNTRY (OR STATE) GOVERNING THE USE AND OWNERSHIP OF AIR-GUNS. DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC. IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK THIS AIRGUN IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

DISTRIBUTED IN THE USA BY SOFT AIR USA - Dallas (TX) office: 817 717 4300 - www.softairusa.com - PALCO SPORTS 8555 Revere Lane North Suite 600 Maple Grove, MN 55369 - USA - www.palcosports.com - MADE IN TAIWAN

- Always check that the gun is unloaded when removed from storage or received from another person.
- Always load the magazine with appropriate .177-4.5 mm Caliber Lead pellets. The use of incorrect projectiles may not be safe and Lead pellets should not be reused.
- Put always the Safety "ON" when you install the ammunition in the gun.
- Do not load your gun if you are not ready to shoot.
- Keep your finger off the trigger until you are ready to shoot.
- If you decide to stop shooting, shoot in a safe direction if one Lead pellets is still into the chamber.
- Always handle the gun as though it were loaded and ready to shoot.
- Always aim in a safe direction.
 - Do not aim or shoot at other people or animal.
- Safety goggles and mouth protection MUST be worn when operating this AIR-GUN gun by the user and any person within range. For some persons, it will be necessary to use safety goggles over their normal optical reading glasses.
- Be careful to avoid rebounding or ricochets and always aim at a safe target. Do not shoot at water.
- CAUTION - Your backstop should be inspected for wear before and after each use. Discontinue use if the backstop surface shows signs of failure. Since backstop surfaces eventually fail, always place the backstop in a location that will be safe should the backstop fail. Discontinue the use of a backstop if the projectile rebounds or ricochets.
- Never use alcoholic beverages or drugs before or during shooting sessions.
- Always store your rifle unloaded, with safety "ON".
- Always store your ammunitions separately from the rifle.
- Keep out of reach of children and non-expert shooters.
- Inspection and maintenance of this rifle are recommended periodically.
- Modification of the rifle mechanism may cause a rifle to malfunction and that tampering with a rifle may make it unsafe to use. Any change in the performance, such as lowered trigger force and shortened trigger travel, indicates possible wear and that such rifle should be inspected, replaced, or properly repaired. Repairs should only be made by qualified personnel.
- Check any rifle that has been dropped to ensure that its function has not been affected